PIONEER®

SERVICE INFORMATION

No. SI-F84011
Date: February, 1984

PR-7820 Inside Limit Adjustment

Change of Alignment Procedure

1. Turn the Power On and play B1 Test Disc.
2. With the unit in PLAY MODE, SCAN FORWARD to a point on the disc above Frame #1000, then SCAN REVERSE towards inside until the player hits the INSIDE LIMIT.

   a) PR-7820 III will kick back a few frames when it reaches the INSIDE LIMIT.

   b) PR-7820 I and PR-7820 II will be in STILL MODE at the INSIDE LIMIT.
3. Adjust VR2 on DSPL Board so that the Kick Back Point (Still Mode for Type I and II) will be between #10 to #15 in the LEAD IN Count Down Numbers. (Note: These are the numbers which appear on the TV Monitor, not the Frame Numbers.)

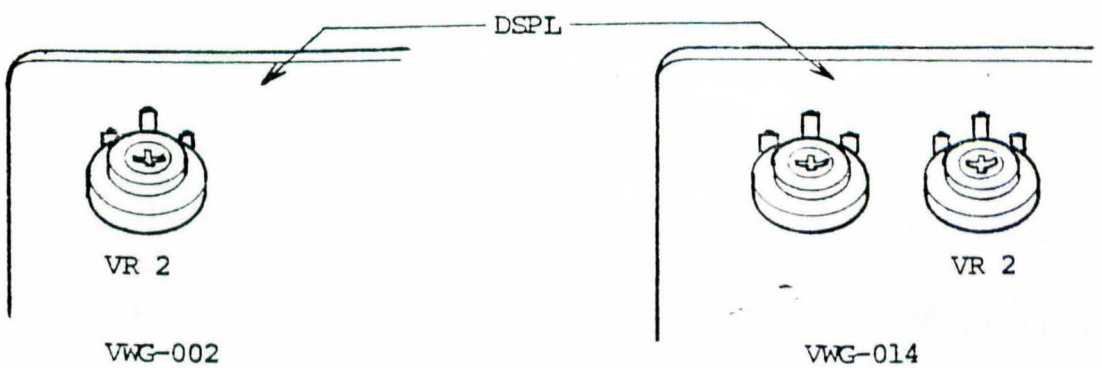

4. Play B1 Test Disc and verify that the player has successfully read the dump signal.
5. If not, readjust the inside limit.

POST OFFICE BOX 1760
LONG BEACH, CALIFORNIA 90801
PHONE: 213/420-5700 FAX: (213)420-5902

PIONEER ELECTRONICS (USA) INC.
TECHNICAL INFORMATION CENTER
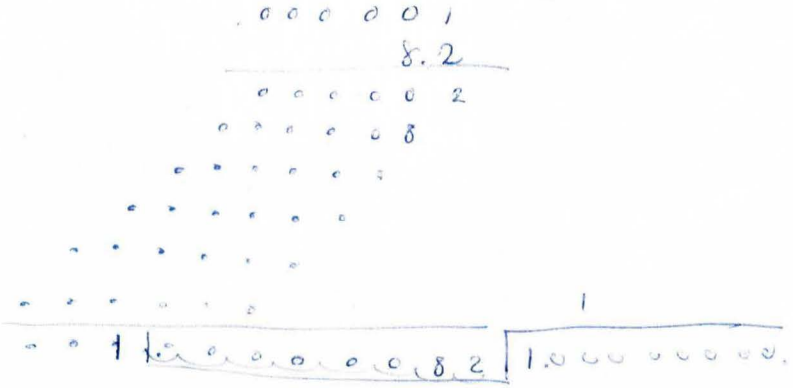
8.2 cm 100 µs.